
# PA40TS20-(1)OT Data Sheet

40 pin TSOP socket/40 pin DIP 0.6" plug

# Supported Device/Footprints


These adapters connect the pins of a 40 pin TSOP device to a 40 pin DIP equivalent. They accept a TSOP device and plug into a DIP socket.


The two adapters differ in wiring. See the wiring section.

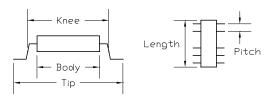

| Body        | Knee    | Tip     | Pitch   | Length      |
|-------------|---------|---------|---------|-------------|
| 18.4 mm typ | 19.0 mm | 20.0 mm | 0.50 mm | 10.0 mm typ |

## **Adapter Dimensions**

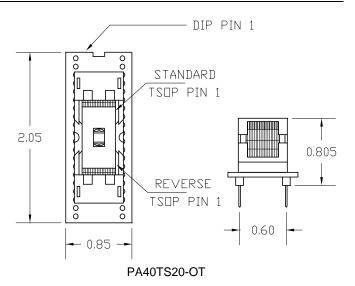

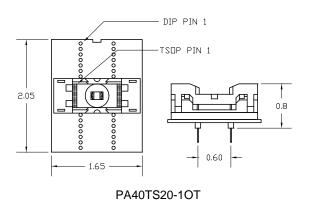

## Adapter Construction

The adapter is made up of 2 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be easily replaced.

The following chart lists the adapters described by this datasheet and their subassemblies.

| Adapter      | Test Socket | Board    |
|--------------|-------------|----------|
| PA40TS20-OT  | 40TSJ-W20   | 40TS20   |
| PA40TS20-1OT | 40TSJ-W20   | 40TS20-1 |

#### **Test Sockets**

| LSC#      | Style    | Mfgr/Pn               |
|-----------|----------|-----------------------|
| 40TSJ-W20 | Open Top | Wells 648-0402211-A01 |

When disassembling the adapter take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

## Adapter Wiring

Both adapters are wired 1 to 1. They differ by the type of 1 to 1 wiring. The types are:

| PA40TS20-OT  | Classic TSOP 1 to 1, by signal position |
|--------------|---|
| PA40TS20-1OT | 1 to 1, by pin number                   |

The following chart shows the connections from the TSOP socket to the adapter's DIP plug.

| PA40TS20-1OT |     |     |     |     |    |     |     |     |     |
|--------------|-----|-----|-----|-----|----|-----|-----|-----|-----|
| PA40TS20-OT  |     |     |     |     |    |     |     |     |     |
| Std          | Rev | Std | Rev | DIP |    | Rev | Std | Rev | Std |
| 1            | 40  | 11  | 30  | 1   | 40 | 31  | 10  | 1   | 40  |
| 2            | 39  | 12  | 29  | 2   | 39 | 32  | 9   | 2   | 39  |
| 3            | 38  | 13  | 28  | 3   | 38 | 33  | 8   | 3   | 38  |
| 4            | 37  | 14  | 27  | 4   | 37 | 34  | 7   | 4   | 37  |
| 5            | 36  | 15  | 26  | 5   | 36 | 35  | 6   | 5   | 36  |
| 6            | 35  | 16  | 25  | 6   | 35 | 36  | 5   | 6   | 35  |
| 7            | 34  | 17  | 24  | 7   | 34 | 37  | 4   | 7   | 34  |
| 8            | 33  | 18  | 23  | 8   | 33 | 38  | 3   | 8   | 33  |
| 9            | 32  | 19  | 22  | 9   | 32 | 39  | 2   | 9   | 32  |
| 10           | 31  | 20  | 21  | 10  | 31 | 40  | 1   | 10  | 31  |
| 11           | 30  | 21  | 20  | 11  | 30 | 1   | 40  | 11  | 30  |
| 12           | 29  | 22  | 19  | 12  | 29 | 2   | 39  | 12  | 29  |
| 13           | 28  | 23  | 18  | 13  | 28 | 3   | 38  | 13  | 28  |
| 14           | 27  | 24  | 17  | 14  | 27 | 4   | 37  | 14  | 27  |
| 15           | 26  | 25  | 16  | 15  | 26 | 5   | 36  | 15  | 26  |
| 16           | 25  | 26  | 15  | 16  | 25 | 6   | 35  | 16  | 25  |
| 17           | 24  | 27  | 14  | 17  | 24 | 7   | 34  | 17  | 24  |
| 18           | 23  | 28  | 13  | 18  | 23 | 8   | 33  | 18  | 23  |
| 19           | 22  | 29  | 12  | 19  | 22 | 9   | 32  | 19  | 22  |
| 20           | 21  | 30  | 11  | 20  | 21 | 10  | 31  | 20  | 21  |

Adapters-Plus Inc.
P.O. Box 900
Tracy, Ca 95378
ph.209-839-0200
fax.209-839-0235
email: sales@adapt-plus.com

PA40TS20-(1)OT Data Sheet Doc: 40TS20-1.DOC Rev 03/04/02 Page 1 of 2

# Using Live/Dead-Bug Adapter

## Which To Use:

Standard and reverse pinout devices are supported by this adapter. Standard pinout devices are inserted live bug and Reverse pinout devices are inserted dead bug.

The socket on this adapter accommodates both orientations using a removable shim. The following chart shows how to set up and use the adapter for each.

Note: Pin 1 of the TSOP is in the upper right corner of the adapter for standard pinouts, in the lower right corner for reverse pinouts (see the Adapter Dimensions section).

| Pinout:        | Standard  | Reverse  |
|----------------|-----------|----------|
|                |           |          |
| Insert Device: | Live Bug  | Dead Bug |
| Shim:          | Installed | Removed  |

#### How To Insert the Shim:

Depress the rim of the socket to the open position. Insert shim with the clips downward, and push the clips through the hole in the socket. Push the shim as far down as it will go. When seated properly, the shim is entirely below the rim of the closed socket.

### How To Remove the Shim:

Depress the rim of the socket so that it is open, and the notch in the side of the shim is visible (see picture below). Insert a small-bladed screwdriver (or other small tool) into the notch, and pry the shim out. This should be possible with a minimum of force.

