# PA44-40-30QD-03 Data Sheet

44 pin TQFP socket/40 pin DIP 0.6" plug


## Supported Device/Footprints

This adapter allows programming of some 44 QFP devices in their 40 DIP footprint.

The following devices are supported using the indicated footprint. **Atmel:** AT90S4434, AT90LS4434, AT90S8535, AT90LS8535 Atmega32(L)

Footprint: Same device 40DIP 0.6"


The QFP socket accepts packages with the dimensions listed below:

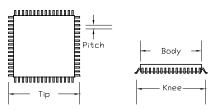

Socket	Body	Knee	Tip	Pitch
44QF-03	10.0 mm typ	11 mm typ	12 mm typ	0.8 mm
TQFP		11.3 mm max	12.8 mm max	

Other devices in the same package that require the same wiring would also be supported.

### **Adapter Dimensions**

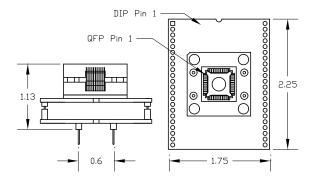

PA44-40-30QD-03

#### Adapter Construction

The following chart shows the various socket and board part numbers that make up these adapters.

Adapter	Test Socket	Top Board	Bottom Board
PA44-40-30QD-03	44QF-03	44QF-03	44-40-30

#### **Test Sockets**

LSC#	Style	Mfgr/Pn
44QF-03	Open-Top	Enplas OTQ-44-0.8-03

The adapter is made up of 3 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be replaced when they wear out.

When disassembling the adapter take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

# Adapter Wiring

The following chart shows the connections from the QFP device to the adapter's DIP plug.

	DEVICE	PLUG	PLUG	DEVICE
İ	39	11*	10**	38
١	40	1	40	37
١	41	2	39	36
١	42	3	38	35
ı	43	4	37	34
ı	44	5	36	33
ı	1	6	35	32
ı	2	7	34	31
ı	3	8	33	30
ı	4	9	32	29
ı	5	10**	31	28
ı	6	11*	30	27
ı	7	12	29	26
ı	8	13	28	25
ı	9	14	27	24
ı	10	15	26	23
	11	16	25	22
	12	17	24	21
	13	18	23	20
	14	19	22	19
	15	20	11*	18
	16	21	10**	17

<sup>\*</sup> GND

Skip and short notation, using header pin numbers: (1, 23, 24, 44) (1-12-24),(11-23-44)



<sup>\*\*</sup> VCC