PA28TSOP3 Data Sheet


28 pin TSOP socket/28 pin DIP 0.6" plug

Supported Device/Footprints

The PA28TSOP3 adapter converts the pinout of a 28 pin TSOP device to its 28 pin DIP equivalent. It accepts the TSOP device and plugs into a DIP socket. Several Flash (EEPROM) memories by several manufacturers are supported.


| Socket | | | Footprint | |
|---------|--------------------|---------|--------------------|--------|
| Mfgr. | Device | Package | Device | Plug |
| Several | 27C256 - 27C512 | TSOP | 27C256 - 27C512 | 28 DIP |
| Several | 28C16 - 28C64 | | 28C16 - 28C64 | |

This adapter accept packages with the dimensions listed below:



| Body | Knee | Tip | Pitch | Length |
|-------------|---------|---------|---------|------------|
| 11.8 mm typ | 12.4 mm | 13.4 mm | 0.55 mm | 8.0 mm typ |

Adapter Dimensions

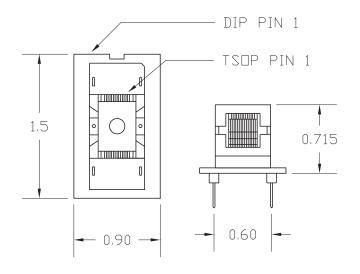

Adapters-Plus Inc. P.O. Box 900 Tracy, Ca 95378 ph.209-839-0200 fax.209-839-0235 email: sales@adapt-plus.com

Adapter Construction

The adapter is made up of 2 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be replaced easily.

The following chart shows the various socket and board part numbers that make up this adapter.

| Adapter | Socket Board | | DIP Plug |
|-----------|--------------|-----------|----------|
| PA28TSOP3 | 28SI-03 | PA28TSOP3 | 0.6" |

Test Socket

| LSC # | Style | Mfgr/Pn |
|---------|--------------|--------------------------|
| 28SI-03 | Open Top ZIF | Enplas #: OTS-28-0.55-01 |

When disassembling the adapter take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

Adapter Wiring

This adapter is wired 1 to 1. There are two common pin 1 locations on 28 pin TSOPs. Wire lists for both are show below.

This adapter is marked for pin 1 of the TSOP in the corner of the package. The drawing in this datasheet shows TSOP pin 1 in the upper right corner of the adapter.

TSOP Pin 1 in the Corner

| TSOP | DIP | DIP | TSOP |
|------------------|-----|-----|------|
| 1 | 22 | 21 | 28 |
| 2 | 23 | 20 | 27 |
| 3 | 24 | 19 | 26 |
| 2 3 4 5 | 25 | 18 | 25 |
| 5 | 26 | 17 | 24 |
| 6 7 | 27 | 16 | 23 |
| 7 | 28 | 15 | 22 |
| 8 | 1 | 14 | 21 |
| 9 | 2 | 13 | 20 |
| 10 | 3 | 12 | 19 |
| 11 | 4 | 11 | 18 |
| 12 | 5 | 10 | 17 |
| 13 | 6 | 9 | 16 |
| 14 | 7 | 8 | 15 |

Some TSOPs are numbered with pin 1 in the middle of the side. For those pinouts the adapter wiring is:

TSOP Pin 1 in the Middle

| TSOP | DIP | DIP | TSOP |
|------------------|--------|-----|------|
| 1 | 1 | 28 | 28 |
| 2 | 2 | 27 | 27 |
| 3 | 2 3 | 26 | 26 |
| 2 3 4 5 | 4 5 | 25 | 25 |
| | 5 | 24 | 24 |
| 6 | 6 | 23 | 23 |
| 7 | 7 | 22 | 22 |
| 8 | 8 | 21 | 21 |
| 9 | 9 | 20 | 20 |
| 10 | 10 | 19 | 19 |
| 11 | 11 | 18 | 18 |
| 12 | 12 | 17 | 17 |
| 13 | 13 | 16 | 16 |
| 14 | 14 | 15 | 15 |

PA28TSOP3 Data Sheet Doc: 28TSOP3.DOC Rev 12/05/00 Page 1 of 1